



## Cleaning your Joey or Infinity Enteral Pump

The pump set loading area of your enteral pump should be cleaned weekly, or when visibly dirty. Follow the instructions below before loading a set.

1. Unplug the enteral pump.
2. Using a damp (not wet) cloth, gently clean the pump set loading area. Be sure to especially clean the slots for the pump tubing.
3. Using a damp (not wet) cloth, gently clean the black rotor.
4. Wipe the sides and bottom of the pump with damp (not wet) cloth.